

Description

The binary output / drives actuator Vivo® K.BIB.01O.20N.WO / K.SIN.01O.20N.WO / K.PAN.01O.20N.WO is a S-mode KNX rail mounting modular device for independent switching electrical loads (single or groups), controlling motor drives and fancoil with 2 or 4 pipe. To operate the device receives a telegram from the bus, sent by a KNX device (such as a pushbutton, a sensor or another switching or control device), that causes the opening or the closing of one or more relays. The device doesn't requires the 230 Vac power supply.

Main characteristics

- Manual switching with pushbuttons
- Status feedback of the output channels through LEDs
- Configuration as normally opened or normally closed switch
- 16 general logic ports
- Status feedback (only at bus operating)
- Time programming: staircase lighting function
- Valve command with PWM operation
- Integration in scenes
- General management command

Control of motor drives

The device can be used for switching and controlling drives dedicated to the motion of shading systems (such as roller shutters, blinds, curtains, etc.) or of doors, windows or shutters. In this case, the number of independent channels is half as compared to the use as binary output. In addition to the manual control with KNX pushbuttons, the operation as actuator for motor drives offers additional features.

- Complete run
- Partial run with stop in position from 0 to 100 % of the run length
- Setting of position
- Adjustment of the slats inclination (for venetian blinds)
- Integration in scenes
- Status indication

The time interval between the change of direction can be set in the planning stage through a corresponding parameter.

Control of Fancoil 3 speed

The actuator can be used on the first 4 outputs (Bibero KNX) or on the first 4/5 outputs (Sini and Pando KNX) for managing a fancoil or split (2 or 4 tubes)

- ON/OFF heating and cooling valve
- 3 speed control with set pass time
- Interlocked output management

Other characteristics

- Housing in plastic material
- Mounting on 35 mm rail (according to EN 60715)
- Protection degree IP20 (installed device)
- Overvoltage class III (according to EN 60664-1)



Warning! Motor drives can be damaged by sudden and repeated changes of the direction of motion. In order to set the correct time interval for reversing the direction of motion, refer to the technical documentation of the drive.

- Classification climatic 3K5 and mechanical 3M2 (according to EN 50491-2)
- Pollution degree 2 (according to IEC 60664-1)

Technical data

- Power supply (electronics) 30 Vdc from KNX bus
- Current consumption < 10 mA
- Power consumption < 240 mW

Environmental conditions

Code	UM	Weight [g]	Dimensions [mm]
K.BIB.01O.20N.WO	4	230	72 x 90 x 70
K.SIN.01O.20N.WO	8	440	144 x 90 x 70
K.PAN.01O.20N.WO	8	510	144 x 90 x 70

- Operating temperature: - 5 ... + 45°C
- Storage temperature: - 25 ... + 55°C
- Transport temperature: - 25 ... + 70°C
- Relative humidity: 95% not condensing


Symbol	Load type	Current
	Incandescent lamps	16 A
	Fluorescent lamps	16 A
	Drives (cosφ ≥ 0,6)	16 A
	Electronic transformer for low voltage incandescent lamps (e.g. halogen lamps)	16 A
	Magnetic-core transformer for low voltage incandescent lamps (e.g. halogen lamps) (cosφ ≥ 0,6)	16 A

The relays used support loads up to 170A in the first 2 ms.

Switching, display and connection elements

The device is equipped with a programming pushbutton and a programming LED, pushbuttons, LED for status indication and terminals for connecting the KNX bus line, and the outputs.

Switching elements

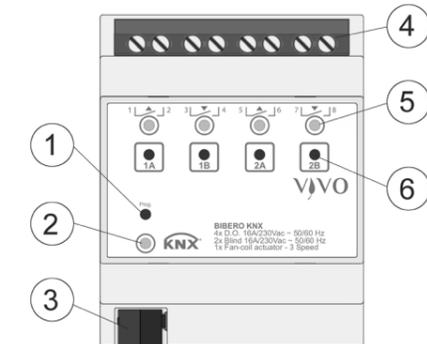

- 1) Programming pushbutton
- 2) Programming LED
- 3) Terminal block for KNX bus line
- 4) Terminal blocks for output channels
- 5) LED for status indication of the outputs
- 6) Pushbuttons for forced operation of the outputs

- Pushbutton (1) for switching between the normal and programming operating mode
- Pushbuttons (6) for forced operation of the output channels

Thanks to the pushbuttons located on the front of the device, the connected loads can be manually controlled or when the programming has not yet been carried out, and in this way it is possible to check the functioning of the loads.

Display elements

- Red LED (2) for displaying the active operating mode of the device (on = programming, off = normal)



Note.

The relay status in case of failure and reset of the bus can be set during the device configuration.

- operation)
- Green LEDs (5) for displaying the switching status of the output channels (on = closed contact, off = opened contact)


Mounting

The device has degree of protection IP20, and is therefore suitable for use in dry interior rooms. The housing is made for rail mounting according to EN 60715 in boards or cabinets for electrical distribution. The installation is in horizontal position, the correct position is when the KNX bus terminal are located at the bottom and the terminals for the outputs are located at the top. For the installation of the device on the rail proceed as follows:

- with the aid of a tool bring the locking device in the fully lowered position (a);
- place the upper edge of the rear inner profile on the upper edge of the rail (b);

- rotate the device towards the rail (c);
- push the locking device upward until it stops (d).

Before removing the device, be sure the outputs have been disconnected and the bus terminal has been ex-

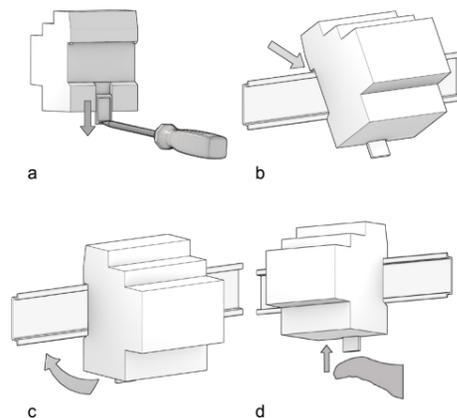


Note. It is recommended that the installation of the device always ensure the full accessibility of the front side to allow the operation of the pushbuttons.

tracted from its slot. Use a screwdriver to slide down the locking device and remove the device from the rail.




Warning! In order to supply the KNX bus lines use only a KNX bus power supply (e.g. Vivo Cursa KNX). The use of other power supplies can compromise the communication and damage the devices connected to the bus.

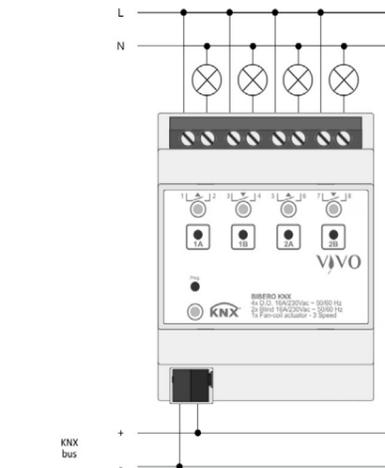


e | Connection of the KNX bus network




Warning! The electrical connection of the device can be carried out only by qualified personnel. The incorrect installation may result in electric shock or fire. Before making the electrical connections, make sure the power supply has been turned off.

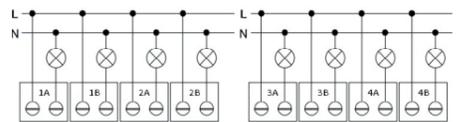

f | Load connection (used as binary output)

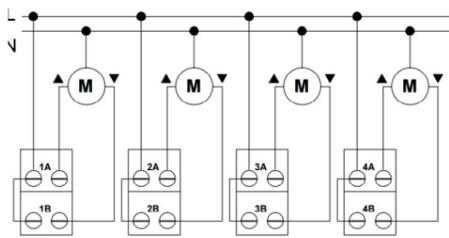

g | Load connection (used as actuator for drive control)

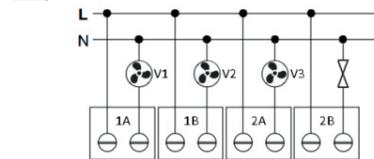

h | Load connection (used as fancoil controller)

Connection of the KNX bus line

The connection of the KNX bus line is made with the terminal block (black/red) included in delivery and inserted into the slot of the housing.



Note. The configuration and commissioning of KNX devices require specialized skills. To acquire these skills, you should attend the workshops at KNX certified training centers.

Characteristics of the KNX terminal block

- spring clamping of conductors
- 4 seats for conductors for each polarity
- terminal suitable for KNX bus cable with single-wire conductors and diameter between 0.6 and 0.8 mm
- recommended wire stripping approx. 5 mm
- color codification: red = + (positive) bus conductor,

black = - (negative) bus conductor

Connection of the electrical loads

The connection of the controlled loads (fig. f, fig. g, fig. h) is made with the screw terminals located at the top. screw clamping of conductors



Warning! Sockets controlled via bus must be clearly identified. Controlling loads with mobile installation (e.g. household appliances connected to mains sockets) must be planned and realized with a careful evaluation of the risks that may arise in the case of control without direct visual contact with the load (remote control). Connecting loads different than those planned, remote controlling without direct verification of the current conditions of the connected load or automatic controlling based on scenes or time-scheduling can cause serious damage to people and objects.



Warning! Incorrect disposal of this product may cause serious damage to the environment and human health. Please be informed about the correct disposal procedures for waste collecting and processing provided by local authorities.

Configuration and commissioning

Configuration and commissioning of the device require the use of the ETS® (Engineering Tool Software) program V4 or later releases. These activities must be carried out according to the design of the building automation system done by a qualified planner.

Configuration

For the configuration of the device parameters the corresponding application program or the whole Vivo® product database must be loaded in the ETS program. For detailed information on configuration options, refer to the application manual of the device available on the website www.vivoknx.com.

Commissioning

For commissioning the device the following activities are required:

- make the electrical connections as described above;
- turn on the bus power supply;
- switch the device operation to the programming mode by pressing the programming pushbutton located on the front side of the housing. In this mode of operation, the programming LED is turned on;

- download into the device the physical address and the configuration with the ETS® program.

At the end of the download the operation of the device automatically returns to normal mode; in this mode the programming LED is turned off. Now the bus device is programmed and ready for use.

Marks

- KNX
- CE: the device complies with the Low Voltage Directive (2006/95/EC) and the Electromagnetic Compatibility Directive (2004/108/EC). Tests carried out according to EN 50491-2:2010, EN 50491-3:2009, EN 50491-4-1:2012, EN 50491-5-1:2010, EN 50491-5-2:2010, EN 50428:2005 +A1:2007 + A2:2009

Maintenance

The device is maintenance-free. To clean use a dry cloth. It must be avoided the use of solvents or other aggressive substances.

Disposal



At the end of its useful life the product described in this datasheet is classified as waste from electronic equipment in accordance with the European Directive 2002/96/EC (WEEE), and cannot be disposed together with the municipal undifferentiated solid waste.

Warnings

- Installation, electrical connection, configuration and commissioning of the device can only be carried out by qualified personnel in compliance with the applicable technical standards and laws of the respective countries
- The use of the device in security applications is not allowed. The device may however be used for auxiliary signaling functions
- Opening the housing of the device causes the immediate end of the warranty period
- In case of tampering, the compliance with the essential requirements of the applicable directives, for which the device has been certified, is no longer guaranteed
- Vivo® KNX defective devices must be returned to the manufacturer at the following address: Vivo Suisse Sagl Via Calloni 1, CH 6900 Lugano

Other information

- The instruction sheet must be delivered to the end customer with the project documentation
- For further information on the product, please contact the Vivo® technical support at the e-mail address: customerservice@vivoknx.com or visit the website www.vivoknx.com
- Vivo® is a registered trademark of Vivo Suisse Sagl
- KNX® and ETS® are registered trademarks of KNX Association cvba, Brussels

© Vivo Suisse Sagl 2017. The company reserves the right to make changes to this documentation without notice.



EN

Binary output/shutters/Fancoil Bibero/Sini/Pando KNX 16A


Code: K.BIB.01O.20N.WO (4 ON/OFF / 2 DRIVES/ 1 FANCOIL)

Code: K.SIN.01O.20N.WO (8 ON/OFF / 4 DRIVES/ 1 FANCOIL)


Code: K.PAN.01O.20N.WO (12 ON/OFF / 6 DRIVES/ 1 FANCOIL)



Instructions

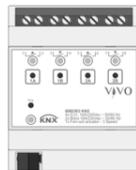

K.BIB.01O.20N.WO

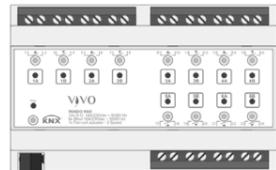

K.PAN.01O.20N.WO



Its a registered brand of

Vivo Suisse Sagl

HQ

Via Calloni 1
CH-6900 Lugano
Tel. +41919800044

info@vivoknx.com
www.vivoknx.com